



LOW SPEED FRONT-ADJUST

Adjust for minimum fan speed as follows:

- a. Turn switch "ON". Rotate the control knob to obtain minimum fan speed.
- b. Insert a small insulated screwdriver into the trim-pot located within the face plate of the fan speed control unit to adjust the slow fan speed setting. Turn clockwise to increase the fan speed, counterclockwise to decrease the fan speed.
- c. After adjusting the slow fan speed, remove AC power from the fan speed control unit by turning off the circuit breaker or removing the fuse at the service panel. After making sure the fan blades have come to a complete stop, restore AC power to the fan speed control unit. The fan should begin to run at the slow fan speed setting. If the fan does not start to rotate; repeat step "b" choosing a slightly higher slow fan speed until the fan does begin to rotate at the slow fan speed setting after the AC power interruption.