
IN BOX One-piece Box for Stucco

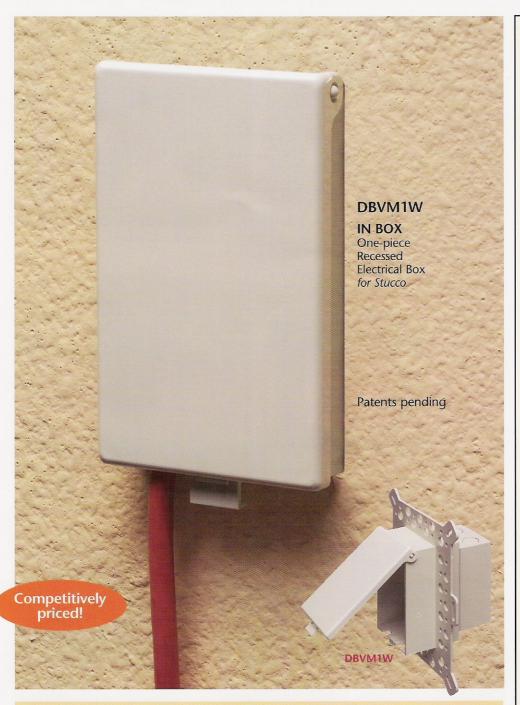

Low Profile, Recessed Electrical Box with Weatherproof-in-use Cover



	JPC/DCI/NAED Mfg. #01 8997	Cover Color	Unit/Std Pkg
DBVM1C	14315	Clear	4
DBVM1W	14316	White	4

Non-metallic, one-piece, recessed **IN BOX***, with mud cover, for stucco construction – includes a plastic block bushing that encases and protects cable as it exits masonry block.

Catalog	UPC/DCI/NAED	Unit	Std	
#	Mfg. #01 8997	Pkg	Pkg	
FXC3	40190	25	25	

Plastic Block Bushing

Encases and protects cable in masonry block construction. Not required for wood.

Arlington's One-Piece IN BOX™ Saves Time and Money – Looks Great Too!

Now, instead of installing an electrical box <u>and</u> a bubble cover assembly, you <u>get it all</u> in the one-piece IN BOX!

The job looks great because the extra-deep IN BOX installs in the wall – so less of it shows outside.

Designed for new stucco over masonry or wood construction, the recessed IN BOX is a one piece box with a weatherproof-inuse cover.

It accepts most single gang wiring devices, and uses a standard indoor wall plate.

- Non-metallic
- Standard duplex and GFCI wall plates, NM cable connector, and mud cover included
- Clear or white cover is removable for added convenience
- No gaskets required



Installation is fast and easy. It's that simple!

for Stucco over Masonry or Wood Construction






Arlington

1 Stauffer Industrial Park Scranton, PA 18517 800/233.4717 Fax 570/562.0646 www.aifittings.com

Low Profile, Recessed Electrical Box with Weatherproof-in-use Cover



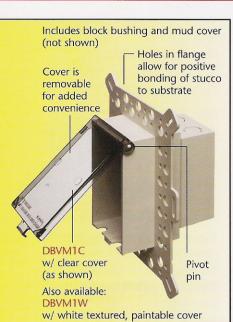

Meets 2005 NEC, Section 406-8 For the protection of exterior outlets which require the use of a weatherproof-in-use cover for all outdoor 15 or 20 amp receptacles.

FXC3 Block Bushing

The FXC3 plastic block bushing mounts to masonry block and protects cable as it passes through the block.

It comes with the IN BOX recessed electrical box for stucco. It's also sold separately. (Not required for wood construction).

Check out the IN BOX styles for existing construction and siding. Look for other models coming soon!



Arlington 1 Stauffer Industrial Park

800/233.4717 Fax 570/562.0646 www.aifittings.com


Scranton, PA 18517




For masonry construction... Make hole in block. Pull wiring through plastic block bushing and opening in block.



Block bushing mounts to block.

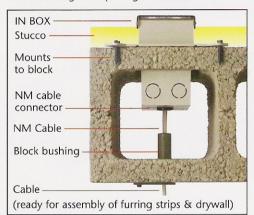

Cutaway showing IN BOX and plastic block bushing mounted in masonry block.

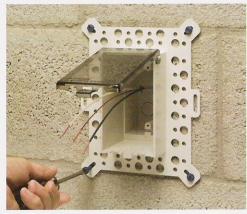

Attach Recessed IN BOX to masonry block. The holes in the flange are designed to allow stucco to bond to the substrate.

